


*Holden VF Commodore  
4 Channel Amp  
DIY plug and play kit*

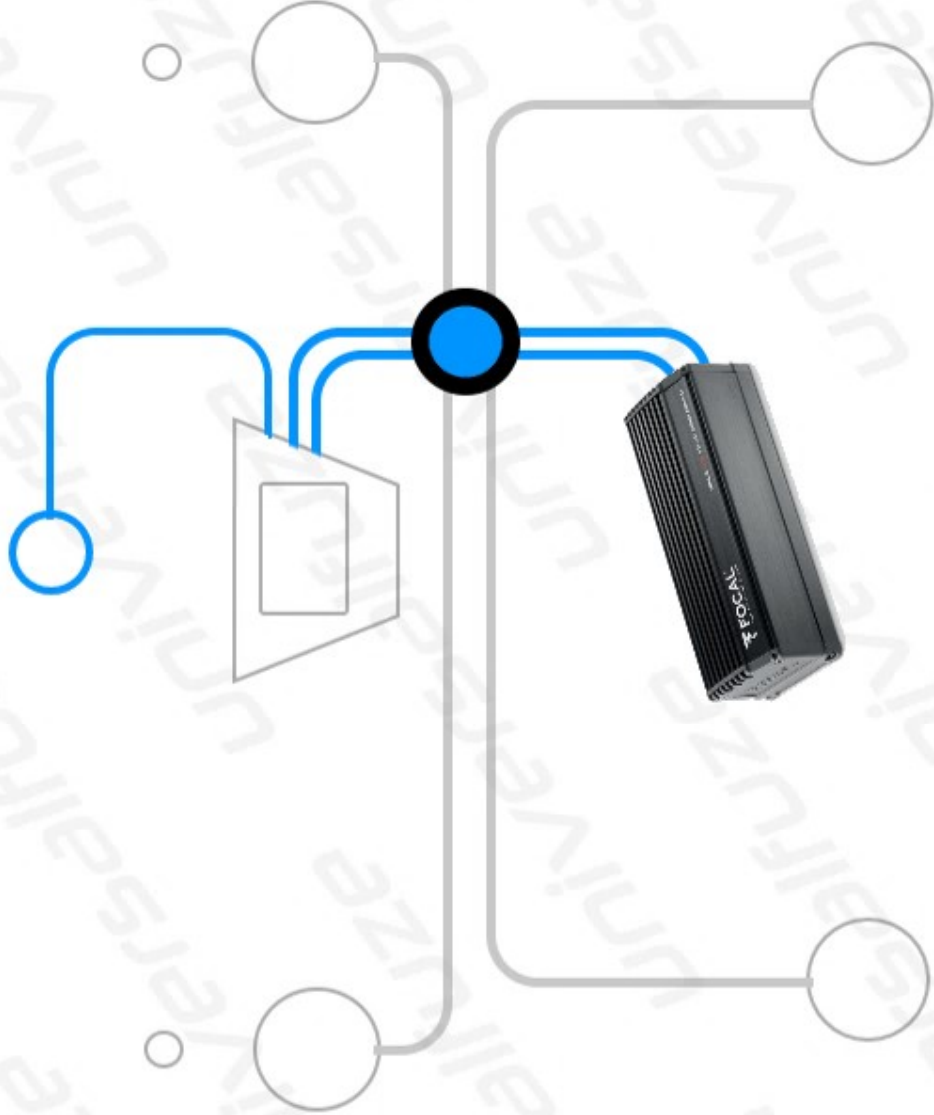

**●** *Interceptor harness*

*Install the interceptor harness at the back of the factory audio unit.  
Connect the amplifier harness to the Amp and Interceptor harness.  
Install the supplied front parking/indicator chime speaker.  
Tune the amplifier to your taste and speaker capabilities.  
Re assemble.*