Holden / Chverolet MyLink Integrated Apple CarPlay / Android Auto

PRODUCT LIST

Interface 1 EA

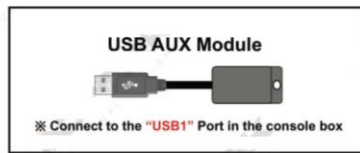Main Power Cable

Power Cable 1 EA

OSD Board 1 EA

HDMI Cable

USB AUX Module
※ Connect to the "USB1" Port in the console box

※ Connect sound using "OBD-AUX" or "USB-AUX"

External Mic

LVDS Cable 1 EA

HOW TO CONNECT THE WIRING

MyLink Headunit

Audio main harness

GVIF Female

Pin 14

USB PORT / UNDER THE ARMREST

AUX TO USB CONVERTER

Bypass with GVIF Cable

GVIF Out   GVIF In   Power / CAN

Ext.Mic

AUX OUTPUT

INTERFACE

HDMI CLASS

HDMI

Digital

NETPLAY

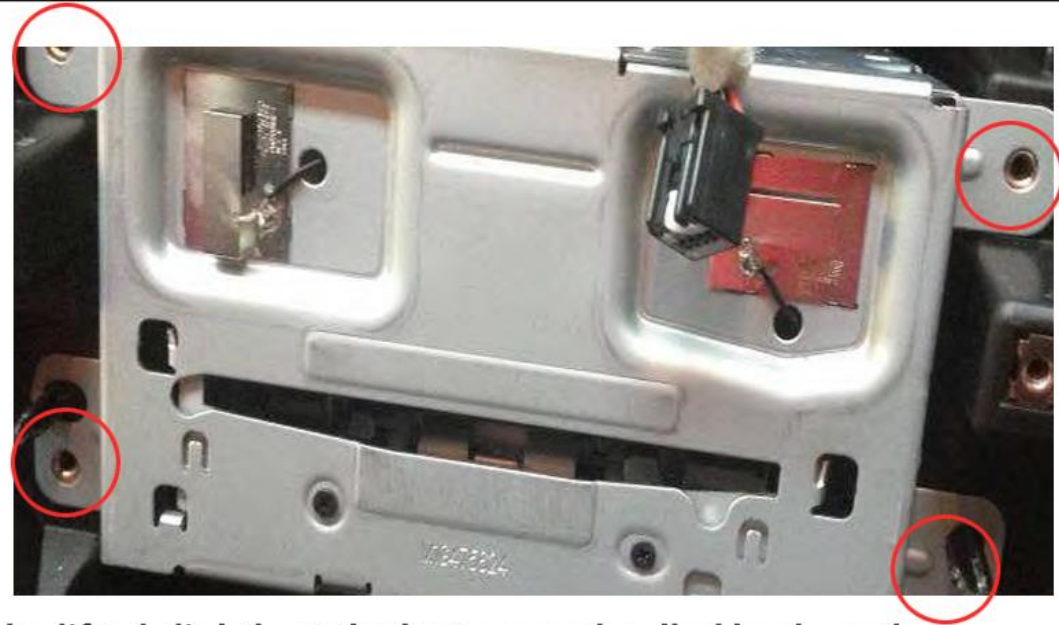USB IN (from Main cable)

OFF

ON

1   2   3   4   5   6   7   8
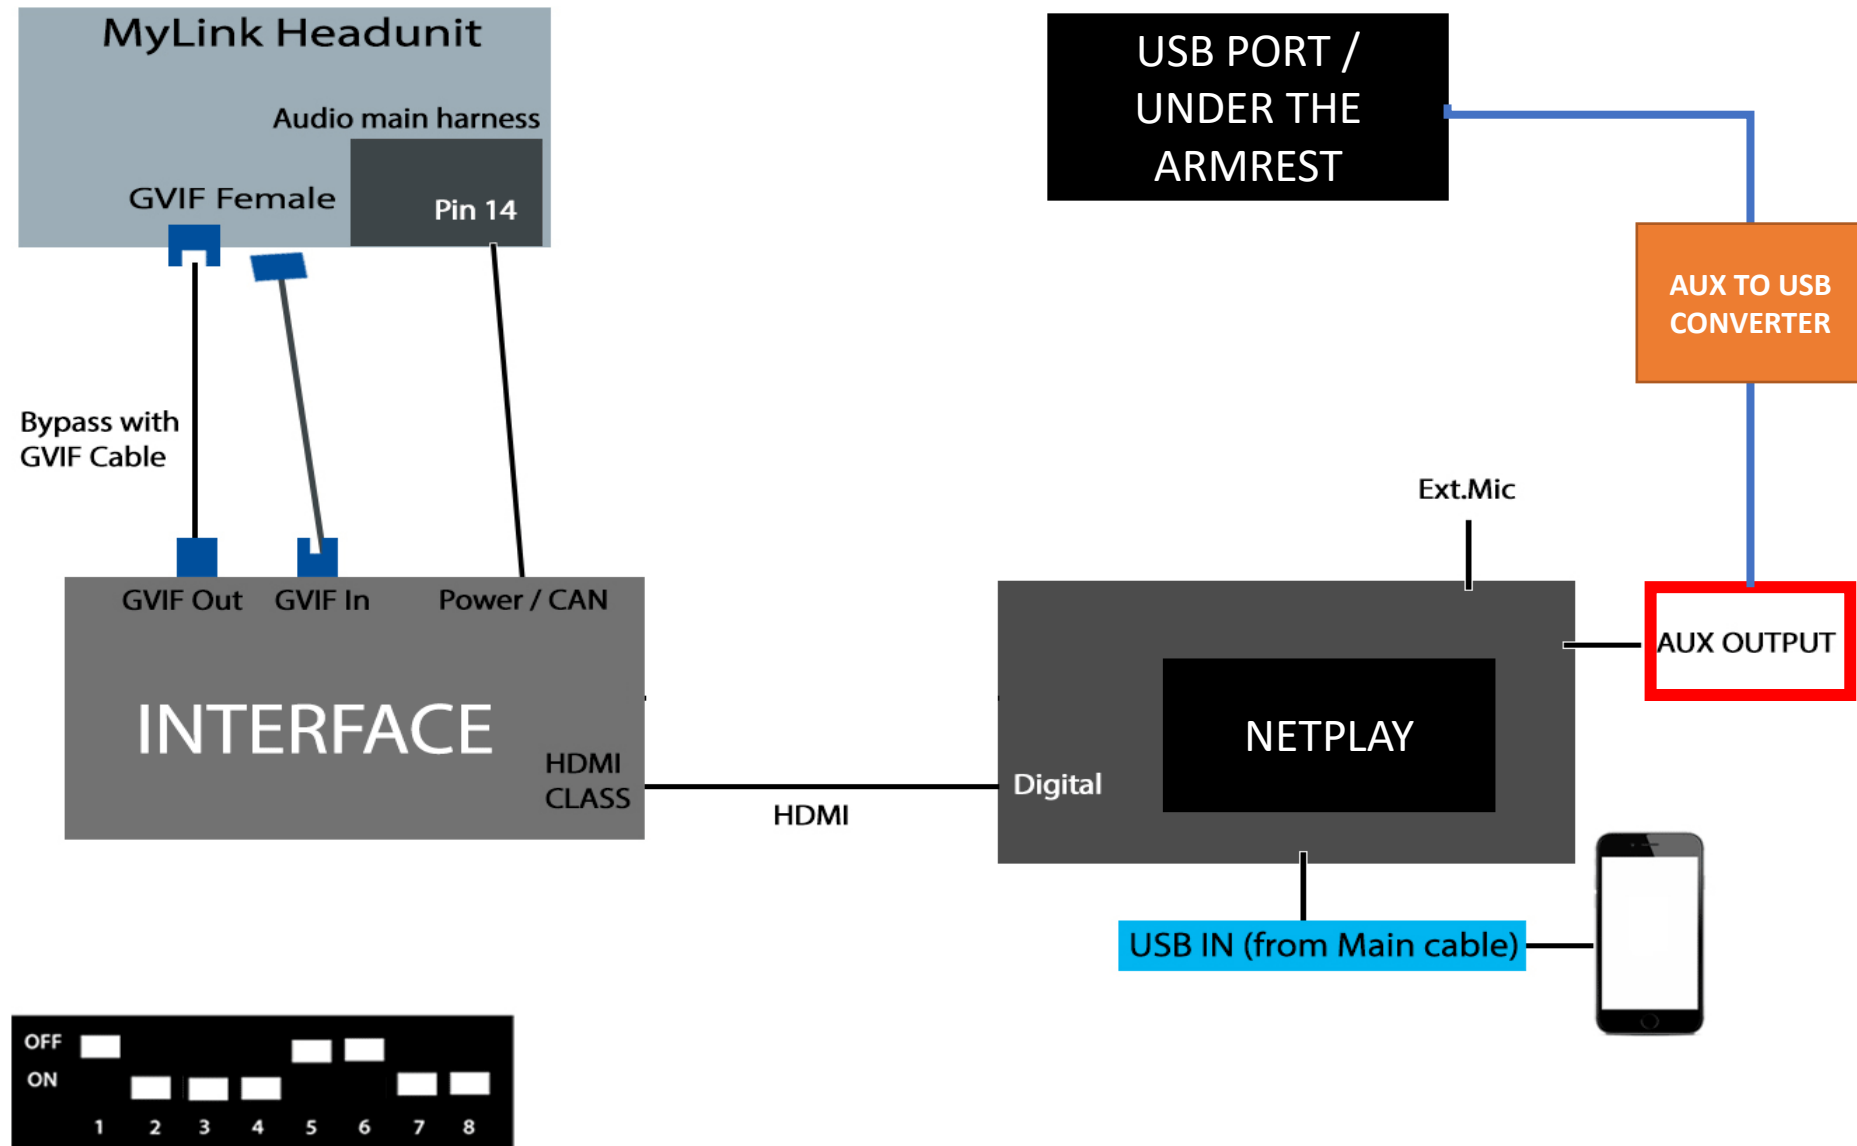
1. Remove left and right dash console covers.

3. Grasp front facia in the following position, and pull out. Then disconnect those 3 connections at the back of it. Handle with care to prevent any sort of scratch or damage.

5. Remove both left & right console wings. These can be lifted slightly at the bottom and pulled backwards. Once It's gone, remove those 4 bolts holding the main headunit.
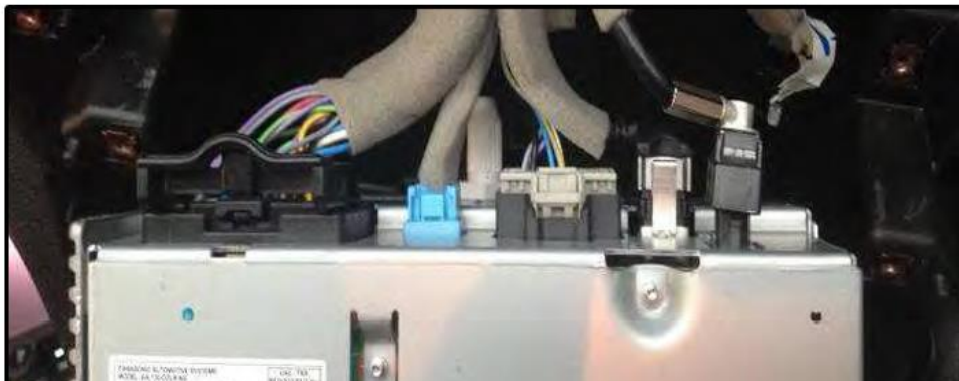
CAN WIRING

CAN LOW - YELLOW -> (PIN # 2)
CAN HIGH - PURPLE -> (PIN #16)
SWC – GREEN -> (PIN #14 OR #28)

2	YE	Integrated Center Stack Serial Data Low	Yellow wire

16	VT	Center Integrated Center Stack Serial Data High	PURPLE WIRE

28	GN	Low Speed GMLAN Serial Data	swc wire
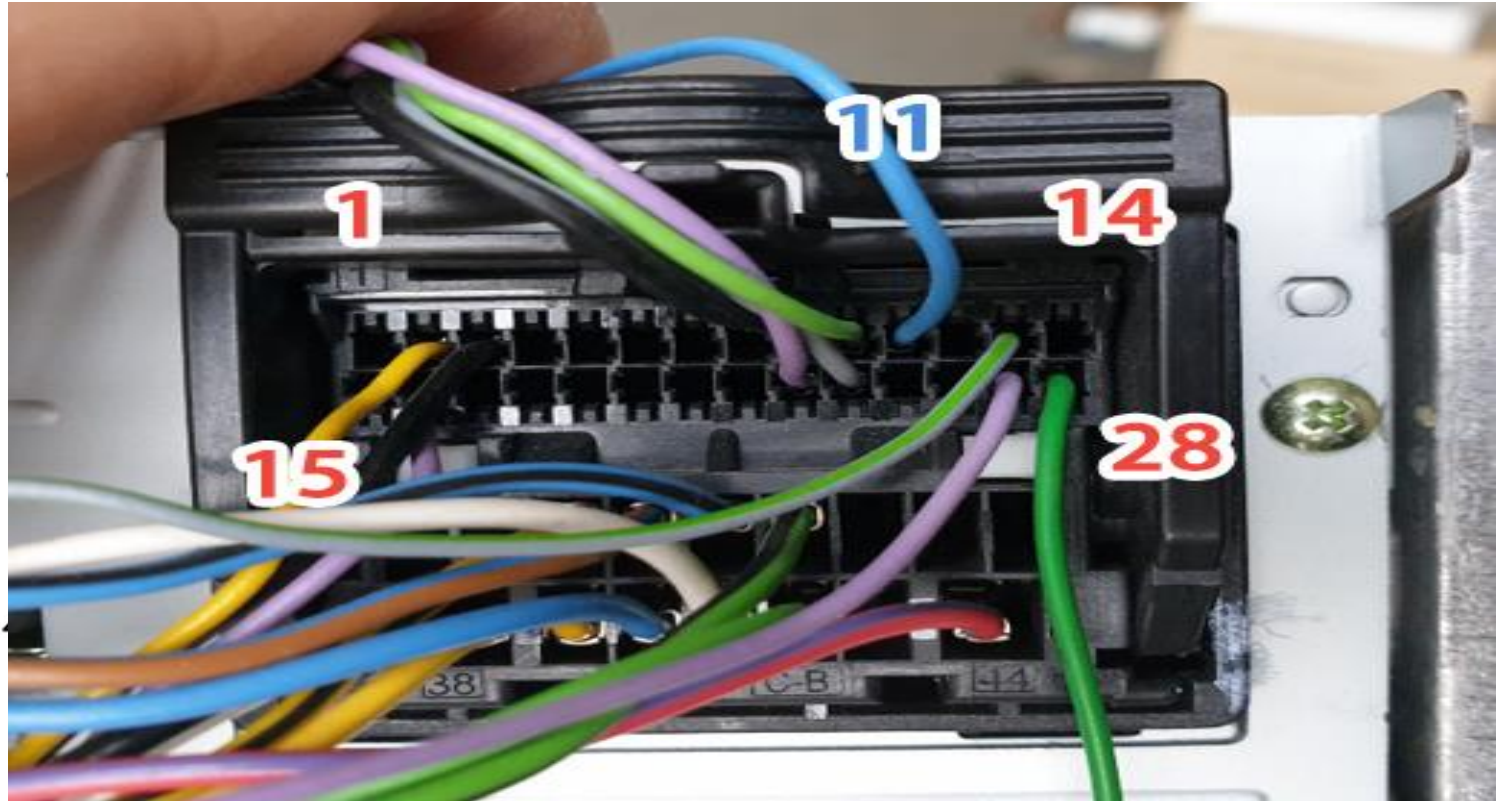
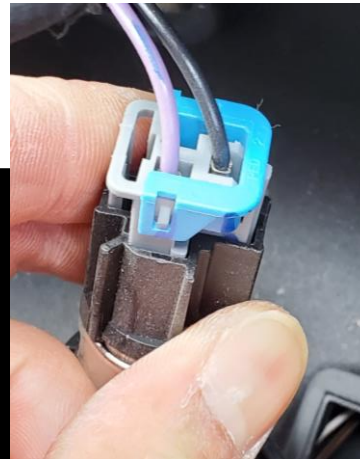# POWER WIRING

- TAP RED AND GDN WIRE FROM BEHIND CIGARETT LIGHT PLUG

PURPLE WIRE – ACC
BLACK WIRE - GROUND

Mode Change

steering wheel button

☐ (blue) Return OEM display

☐ (red) mode change (2 seconds)

☐ (green) Back to OEM display for 2 seconds and back to CarPlay
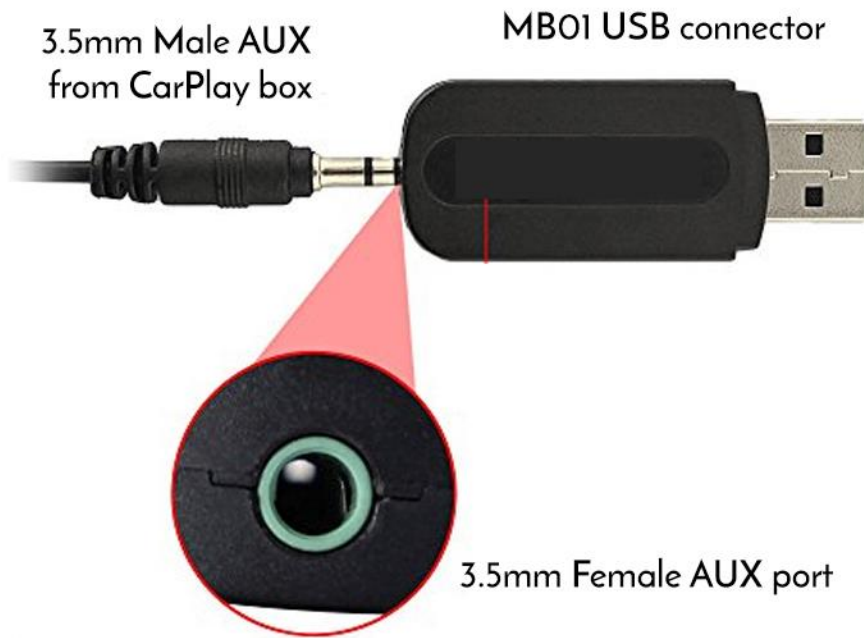
Scroll Up or down button will change music tracks as next and previous tracks

CarPlay to Audio- Sound connection

3.5mm Male AUX
from CarPlay box

MB01 USB connector

3.5mm Female AUX port

USB PORT

This **USB Dongle** will let **CarPlay** box to play sound via **Media - USB** connection.

ONLY IF YOU CAN'T SELECT IPOD MODE FROM MEDIA SOURCE

Please connect the AUX to USB adapter to USB port

press the mode button on the AUX to USB adaptor about 5 seconds gently like the picture shown

After then disconnect and reconnect USB plug and it will work